
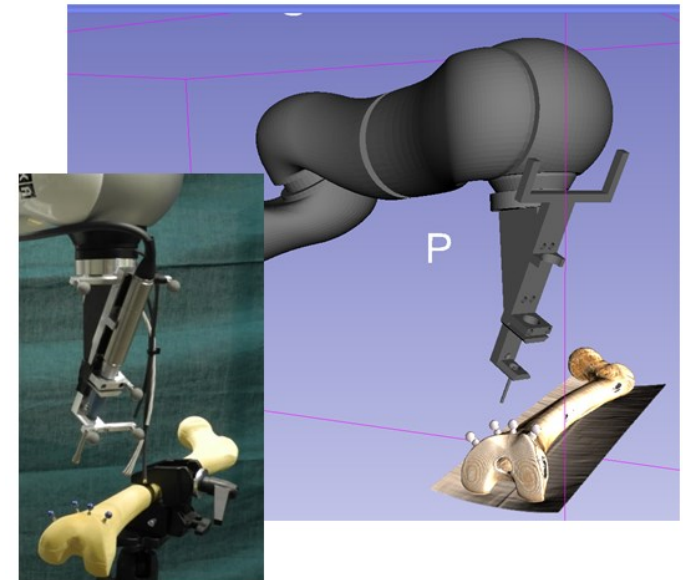


Tutorial

LightWeightRobotIGT – Getting Started

Sebastian Tauscher
Institute of Mechatronic Systems
Leibniz Universität Hannover
Sebastian.Tauscher@imes.uni-h

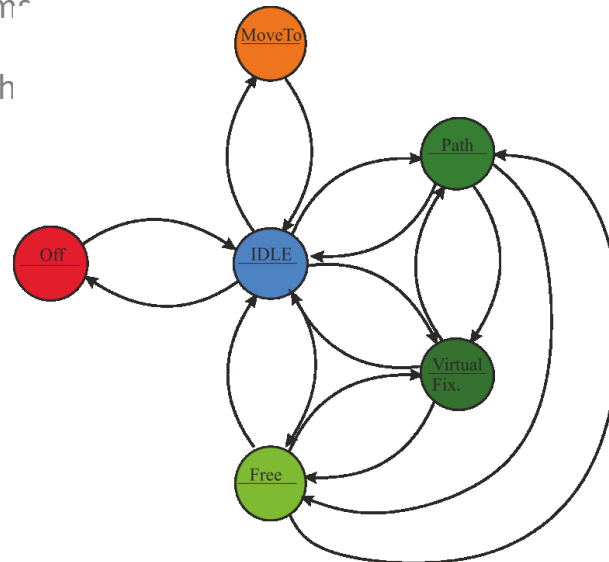

Outline

System Overview

Requirements


Set up KUKA Sunrise control

Install Example

Install LightWeightRobotIGT

Run Example

System Overview - Interface Concept

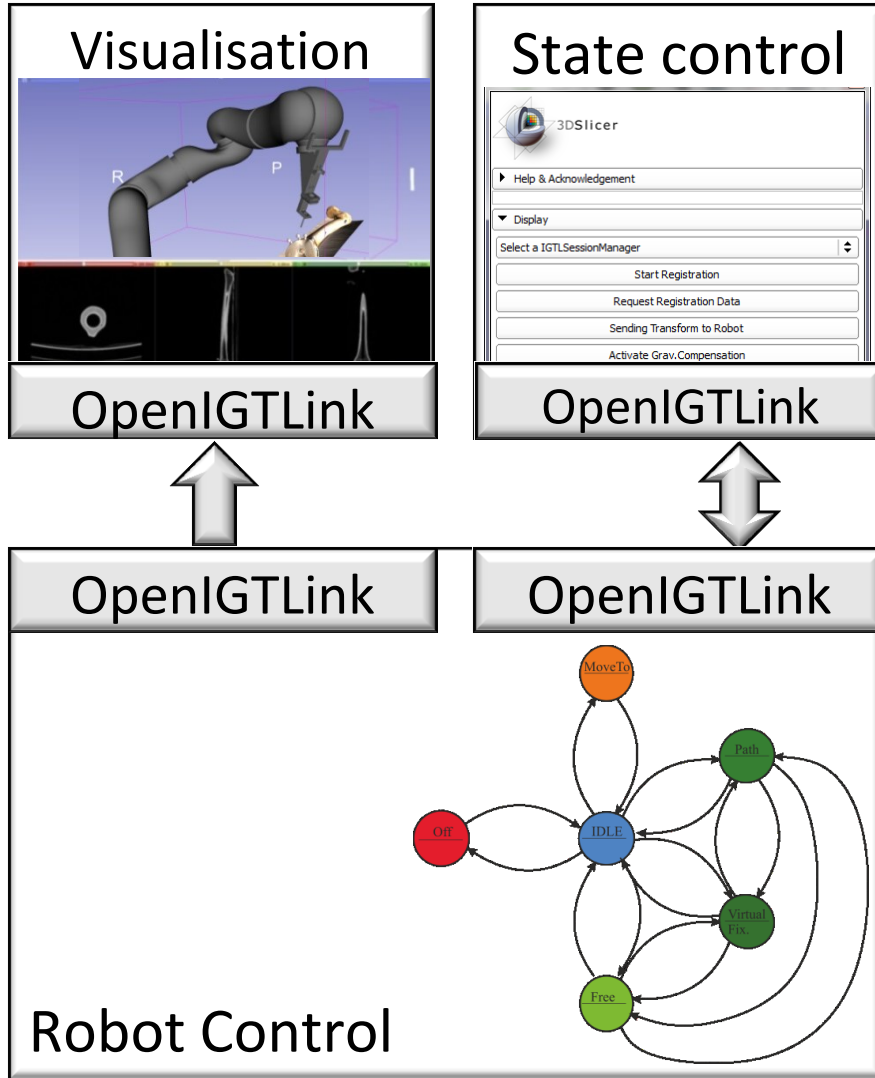

Robot as element of IGT system


Separate visualisation & state control interface

OpenIGTLink based

- Small foot print & widely used
- Open protocol for IGT

State machine for intuitive and direct control

System Overview

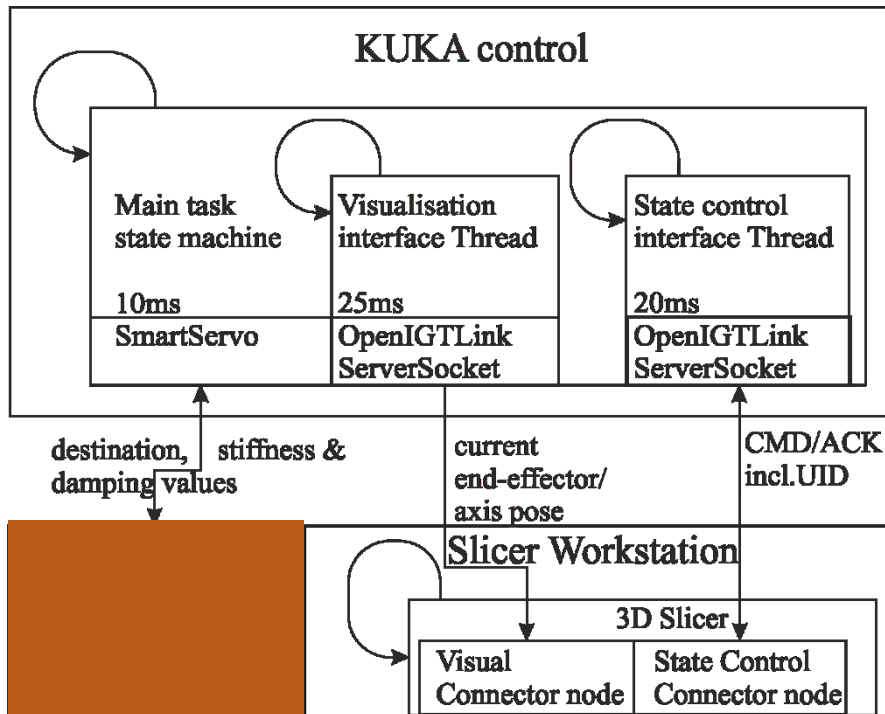

Slicer workstation

- 3D Slicer module
- *LightWeightRobotIGT* as state control

KUKA control

- Java robot application
 - Visualisation & state control interface thread
 - State machine thread

KUKA Light weight robot (LWR)

System Requirements

Requirements

- Robotic system
 - KUKA sunrise control & LWR iiwa
 - KUKA Sunrise.Connectivity Smart Servo Motion Extension
 - Notebook/Desktop PC with Sunrise.Workbench 1.0 or higher
 - LWROpenIGTIF package including exemplary state machine
- Slicer Workstation
 - 3D Slicer 4.4 64 Bit
 - See <http://www.slicer.org>
 - Point-to-point ethernet connection to Sunrise control (use the same notebook/desktop PC for the Sunrise Workbench and 3D Slicer)

Outline

System Overview

Requirements

Set up KUKA Sunrise control



Install Example

Install LightWeightRobotIGT

Run Example

Installing LWROpenIGTIF

- Download *LWROpenIGTIF* at GitHub including STL-files of the LWR (*RobotModel*)
 - <https://github.com/tauscherSw/LWROpenIGTIF.git>
- Add the *LWROpenIGTIF* and the *OpenIGTLink* folder to your sunrise project source folder
 - Example: C:\Devel\KUKA\YourSunriseProject\src
- Add the *OpenIGTLinkLib* folder to the project folder
 - Example: C:\Devel\KUKA\YourSunriseProject
- Add the *SimpleStateExample.java* file to the application source folder
 - Example:
C:\Devel\KUKA\YourSunriseProject\src\application
- Install your sunrise project
- Synchronize the sunrise workbench with the sunrise control

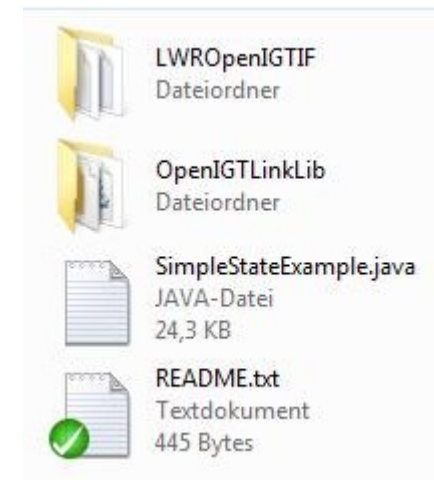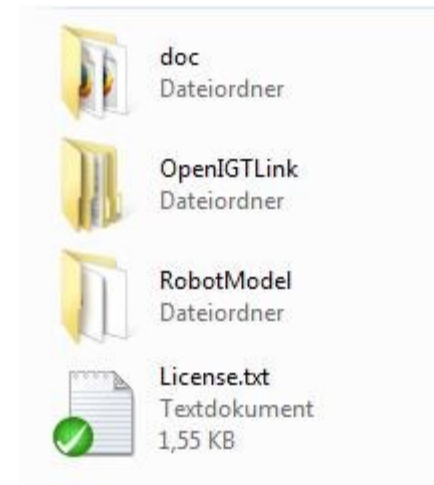

Installing LWROpenIGTIF

- Set path to the SWIGigtutil.dll directory in the LWRVisualizationIF class (line 60)
 - `System.load(„PATH/SWIGigtutil.dll“);`
 - Path is:
`C:\KRC\ApplicationServer\Git\YourSunriseProjectName\OpenIGTLinkLib`
- Copy the STL-folder somewhere on your Slicer Workstation
 - Example: `C:\Program Files\Slicer 4.4.0-2014-11-24\RobotModel\`
- Software documentation of the LWROpenIGTIF classes can be found here:
 - <https://github.com/tauscherSw/LWROpenIGTIF.git>

Customizing LWROpenIGTIF

Before running the example you should

- Change the current tool data in the SimpleStateExample.java according to the load and geometry of your tool
- Check if the default start position $q = \{ 0.0, 30.0, 0.0, -60.0, 0.0, 90.0, 0.0 \}$ is safe. **WARNING: There is no safety check!**
- Have experience with the robot and the robot control

```
final double translationOfTool[] ={ -40, 10, 207 };
//{ 54.5, 0.1, 211.6 };

//and the mass in kg
final double mass = 0.6;

//First rough guess of the Center of Mass
final double centerOfMassInMillimeter[] =
{ -5, 0, 50 };

ImesTool = ServoMotionUtilities.createTool(imesLBR,
    "ImesTool", translationOfTool, mass,
    centerOfMassInMillimeter);
ImesTool.attachTo(imesLBR.getFlange());
```

Before starting the example you can

- Adjust the cycle times of the different threads according to your needs

Outline

System Overview

Requirements

Set up KUKA Sunrise control

Install Example

Install LightWeightRobotIGT

Run Example

Installing LightWeightRobotIGT

- Download 3D Slicer 4.4 64-Bit Version
- Install 3D Slicer
- Install LightWeightRobotIGT Extension using the Extension Manager
 - <http://www.slicer.org/slicerWiki/index.php/Documentation/4.3/SlicerApplication/ExtensionsManager>

Outline

System Overview

Requirements

Set up KUKA Sunrise control

Install Example

Install LightWeightRobotIGT

Run Example

Start Connection


Open 3D Slicer on the Slicer Workstation

Open LightWeightRobotIGT module

- Modules->IGT->LightWeightRobotIGT
- Set path to the folder containing the STL-files
- Check if the IP-address and ports of the robot control is set correctly; default is 192.168.42.2 (Modules->IGT->OpenIGTIF)

Start *YourProject* on the robot control

- Check if two interfaces and the state machine were successfully started on the SmartPad (Control Panel of the robot control)

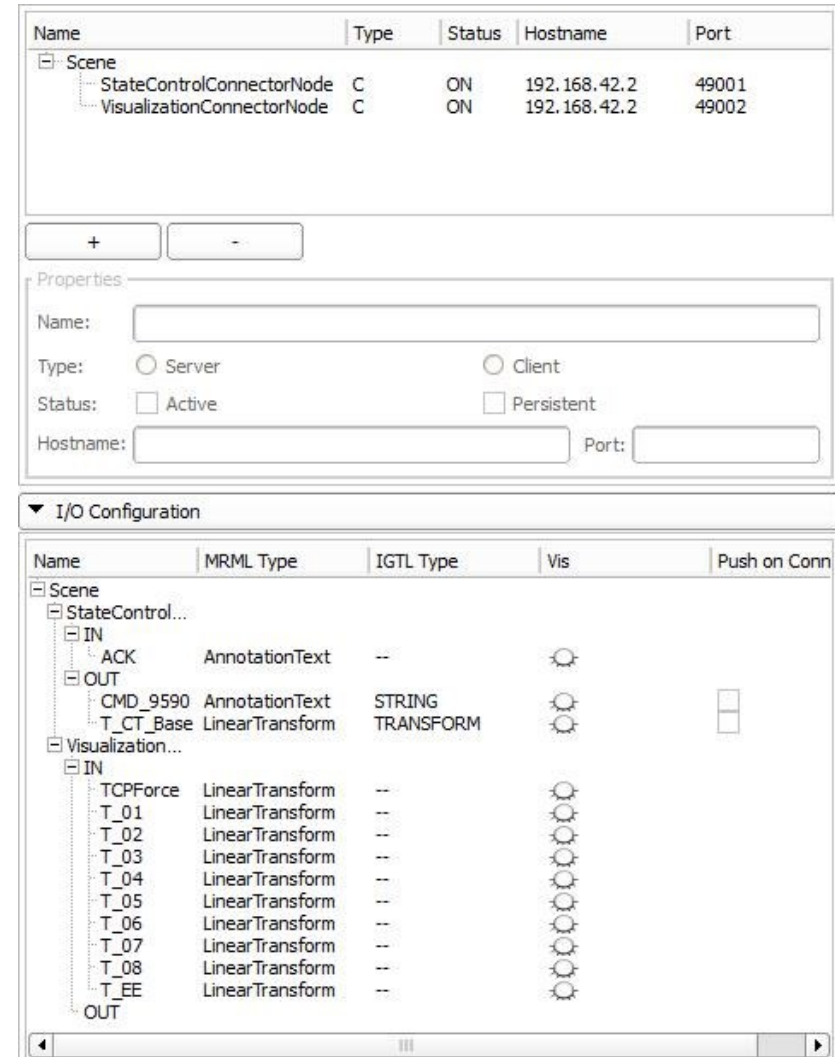

The screenshot displays the configuration window for the LightWeightRobotIGT module. It is divided into several sections:

- Table 1: Connection Settings**

Name	Type	Status	Hostname	Port
Scene				
StateControlConnectorNode	C	ON	192.168.42.2	49001
VisualizationConnectorNode	C	ON	192.168.42.2	49002

Below the table are controls for adding (+) and removing (-) connections.

- Properties Section:** Includes fields for Name, Type (radio buttons for Server and Client), Status (checkboxes for Active and Persistent), Hostname, and Port.
- I/O Configuration Section:** A table showing the mapping of MRML types to IGTL types and their visibility.

Name	MRML Type	IGTL Type	Vis	Push on Conn
Scene				
StateControl...				
IN				
ACK	AnnotationText	--	<input type="checkbox"/>	
OUT				
CMD_9590	AnnotationText	STRING	<input type="checkbox"/>	<input type="checkbox"/>
T_CT_Base	LinearTransform	TRANSFORM	<input type="checkbox"/>	<input type="checkbox"/>
Visualization...				
IN				
TCPForce	LinearTransform	--	<input type="checkbox"/>	
T_01	LinearTransform	--	<input type="checkbox"/>	
T_02	LinearTransform	--	<input type="checkbox"/>	
T_03	LinearTransform	--	<input type="checkbox"/>	
T_04	LinearTransform	--	<input type="checkbox"/>	
T_05	LinearTransform	--	<input type="checkbox"/>	
T_06	LinearTransform	--	<input type="checkbox"/>	
T_07	LinearTransform	--	<input type="checkbox"/>	
T_08	LinearTransform	--	<input type="checkbox"/>	
T_EE	LinearTransform	--	<input type="checkbox"/>	
OUT				

Start Visualization of Robot and Force Vector

Click Start cyclic communication (yellow)


- Cyclic communication with the state control is now active

Click *Load Robot STL* (blue)

- Now the robot should be visualized in the 3D view
- Robot colour changes due to the current state (colour coding see state machine description in Tutorial: LightWeightRobotIGT-Introduction)

Click Show TCP Force (green)

- A 3D arrow is now shown at the tool center point

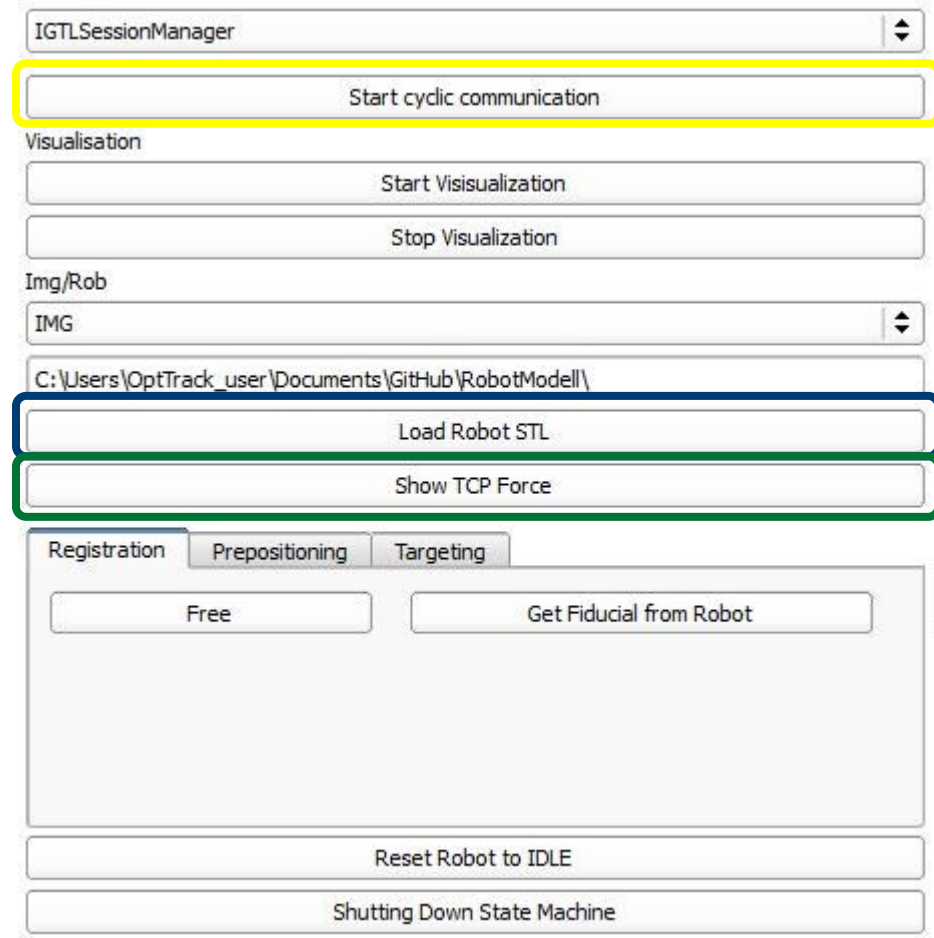




Switching between states

Click on different states as you like

- **WARNING:** Check if the default **position** of the virtual fixtures is **safe** and that the robot is not in the **locked zone** of the virtual fixtures


Now you can :

- Change to Free, Idle, Path and VirtualFixtures
- Visualise active Virtual Fixtures in Slicer (see figures)
- **NOT** set the robot to MoveTo state; Therefore, you need to register/send the `T_CT_Base` transform to the state control (see next page)

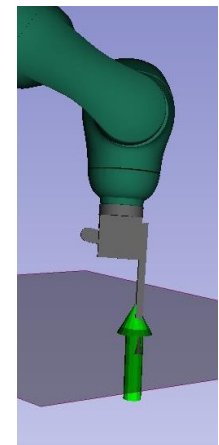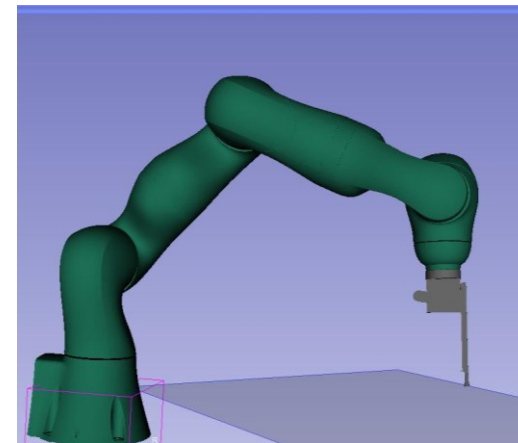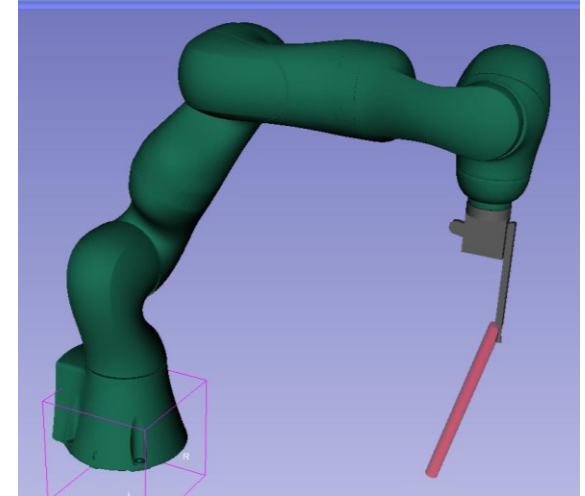

Registration – Workflow I

Example of Point based Registration

- Load Dicom data/STL file of your target object
- Define fiducials in a fiducial list using *Create-Fiducial* 
- Set robot to *Free* mode (click *Free* in registration tab)
- Move robot to fiducial of physical object
- Click *Get Fiducial from robot* (in registration tab)
- Repeat this step for all fiducials



Info: For Registration you need a target object and CT-Data of this objects! Furthermore landmarks are needed to obtain the transformation by a point based registration

Registration – Workflow II

- All points are saved in the *Fid_list* annotation node
- Use *Fiducial Registration* module (see figure)
 - Fixed landmarks: *F*
 - Moving landmarks: *Fid_List*
 - Save transform=> *T_CT_Base*
- The Matrix *T_CT_Base* is automatically send to the robot control when its value is changed
- Check if the registration was successful
 - Robot is now visualized in relation to target
 - MoveTo enabled (carefully use this state!!)



Fixed landmarks

Moving landmarks

Save transform



Transform Type Translation Rigid Similarity

Info: For Registration you need a target object and CT-Data of this objects! Furthermore landmarks are needed to obtain the transformation by a point based registration

Visualisation concept - Force

Force representation with similar transform

- Force COF
 - z-axis in force direction
 - at tool centre point
- Transformation from robot base to force coordinate frame
- Scale: force magnitude

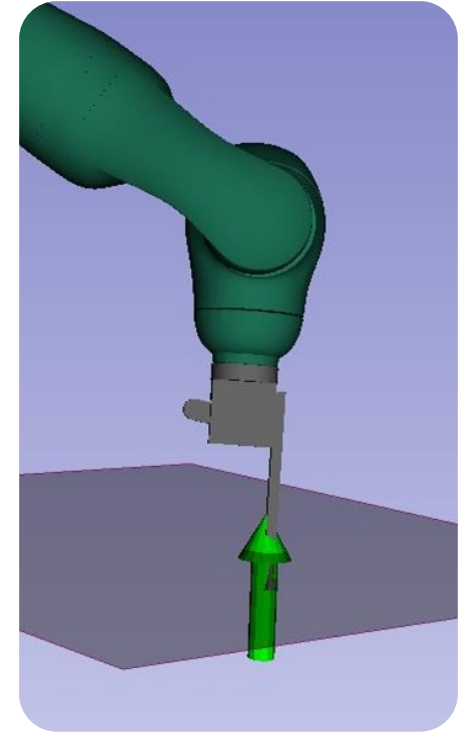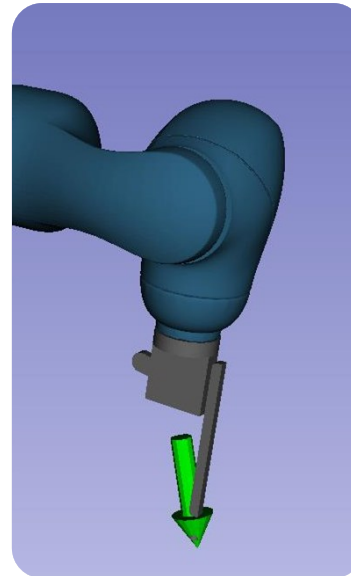


Visualisation concept - State

Change of robot colour according to the acknowledge string

- Registration (**Free**)
- Pre-Positioning (**Path**, **VirtualFixtures**)
- Targeting (**MoveTo**)
- Save (**IDLE**)




⇒ Intuitive and direct feedback on current state and success of transition request

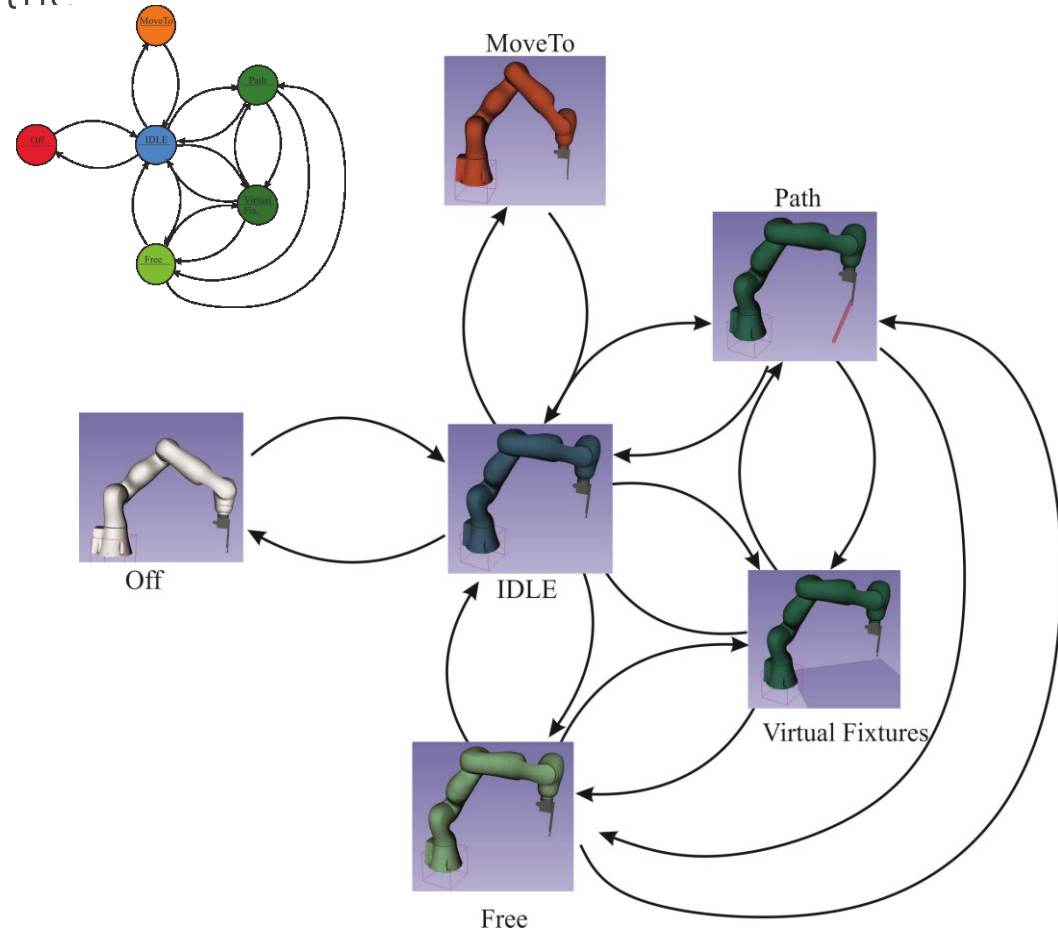

Visualisation concept - State

Visualisation of active Virtual Fixtures

- Geometries: plane, cone or path
- Change of colour due to active current zone
 - Free
 - Aware
 - Locked

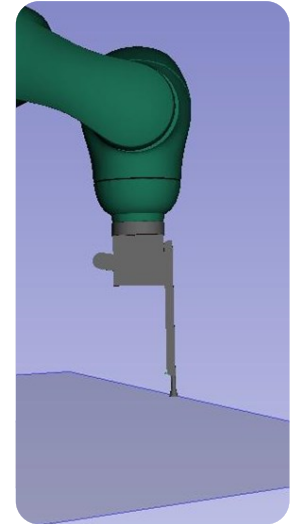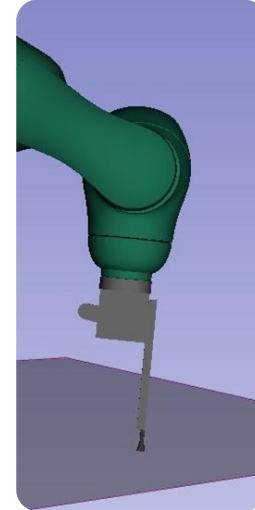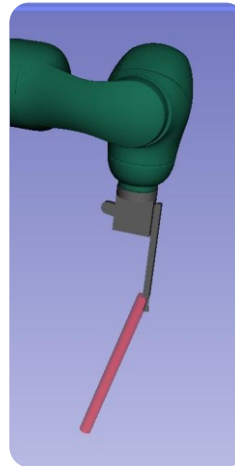

Tutorial

LightWeightRobotIGT – Getting Started

Sebastian Tauscher
Institute of Mechatronic Systems
Leibniz Universität Hannover
Sebastian.Tauscher@imes.uni-h

